




SAFETY BOLLARDS

The Safety Bollard is held to its base by a shear bolt which allows the head of the bollard to come free from its base when overloaded, thus protecting the jetty and leaving the fixed base free from any damage.

The head of the bollard is connected to its base with a precautionary retaining chain (not shown) which will keep the bollard head from going over the side. To return to service only the shear bolt need be replaced.



K-2006

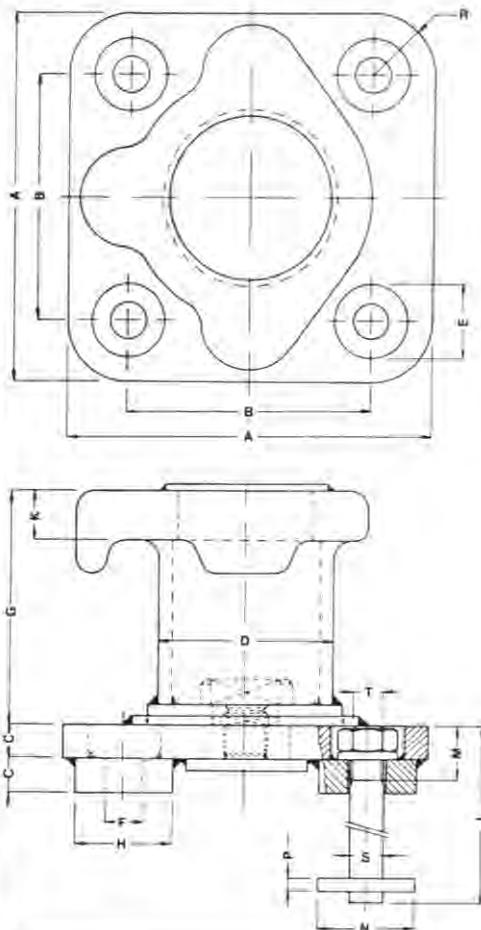

Size	150	125	100	75	50	30	25	20	15	10
Nom-load*	1500	1250	1000	750	500	300	250	200	150	100
A	900	900	750	750	650	650	600	550	500	450
B	600	600	500	500	400	400	400	350	300	250
C	90	80	70	65	60	50	45	40	35	30
D	419	406	356	324	298	273	267	245	219	194
E	190	175	160	150	140	130	120	110	100	95
F	94	85	77	68	60	52	46	40	34	28
G	500	470	435	405	380	355	330	310	290	270
H	240	225	210	200	190	180	170	160	150	145
K	120	110	100	90	80	70	65	60	55	50
L	1000	1000	1000	1000	1000	1000	1000	1000	1000	1000
M	135	120	105	95	90	75	65	60	50	45
N	180x200	180x200	180x200	180x200	180x200	180x200	180x200	180x150	130x150	100x150
P	25	25	25	25	25	25	25	20	20	20
R	150	150	125	125	125	125	100	100	100	100
S	95	85	75	65	60	50	45	40	35	25
T	M90	M80	M72	M64	M56	M48	M42	M36	M30	M24
W**	1030	930	605	485	355	290	223	185	140	105
Part No.	084-6446	084-6464	084-6482	084-6507	084-6605	084-6623	084-6641	084-6669	084-6687	084-5703

* Capacity in kN.
 ** Weight in kg.
 Dimensions in mm.